



# RCCS3 CONFIGURATION MINI PC / BT LASERS

IDC5 BLUETOOTH CONNECTION FOR FIRST TIME USE

**1** Log Into Your Registered IDC5 Account With Current Software Coverage

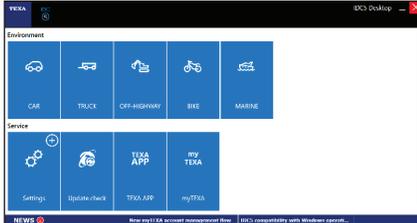


**2** Select CAR Environment Diagnostics

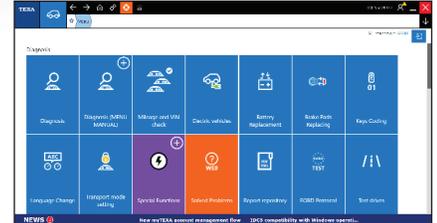


**3** Select The Settings Icon At The Top Of The Menu Bar




**4** Select Wand Icon Navigate Configuration Wizard / Form Fill-In Shop Information

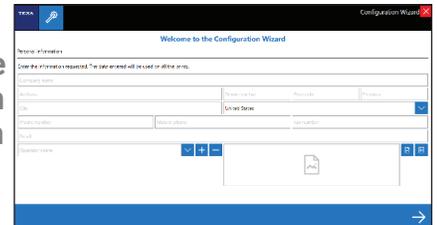

**5** Select RCCS3 From Detected Devices List / MINI PC Is Now Bluetooth Configured

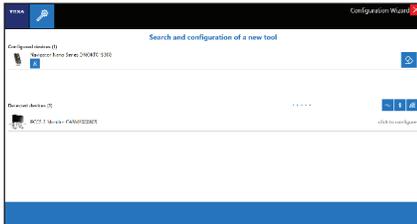


**6** Select "3 Bluetooth Distance Measures" To Access All Devices

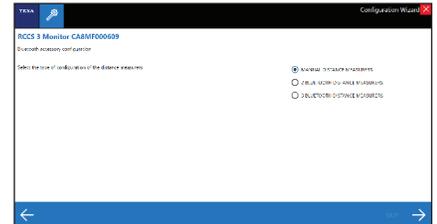


**7** Turn On BT Measurement Devices In Consecutive Order As Described




**8** Bluetooth Accessory Configuration Confirmation Screen

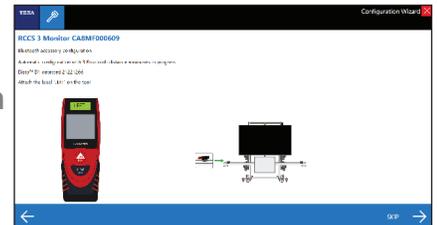

**9** Select End Configuration To Complete The Setup Process

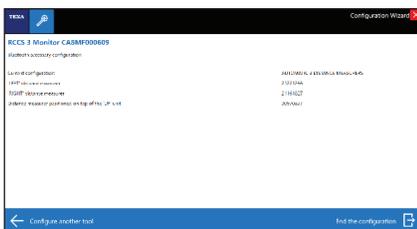

**Pre Calibration Setup**  
Confirmation The Bluetooth Measure Devices Connected

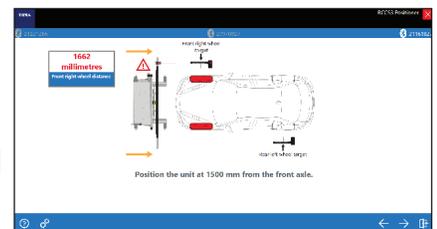

**TECH TIP - Avoid Excessive BT Exposure From Other Hardware During Pairing Or Measurement**